




JH-25T/JH-25S

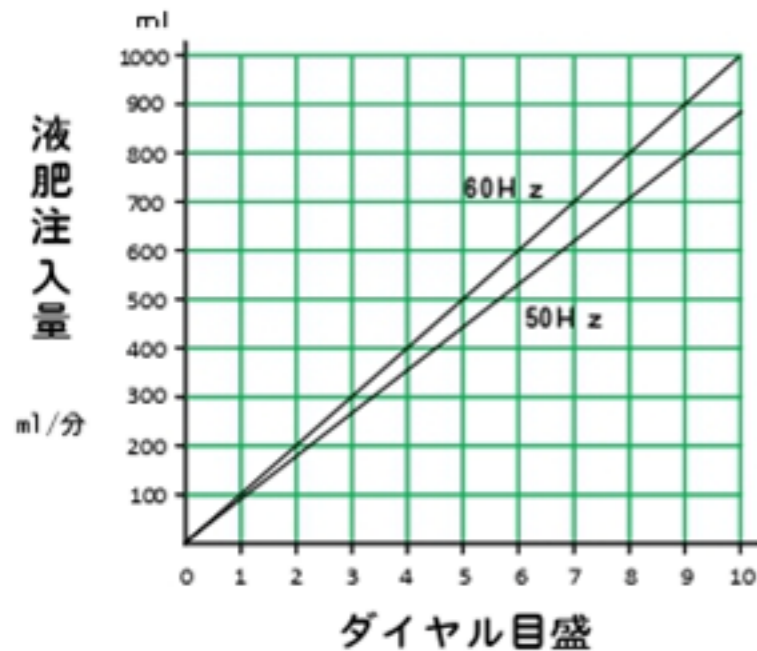

JH-254T/JH-254S

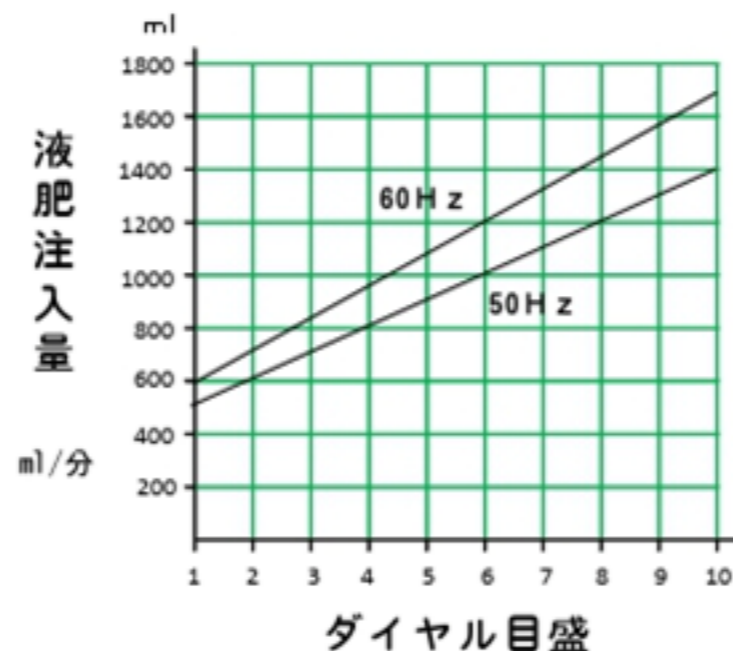

JH-3000T/JH-3000S

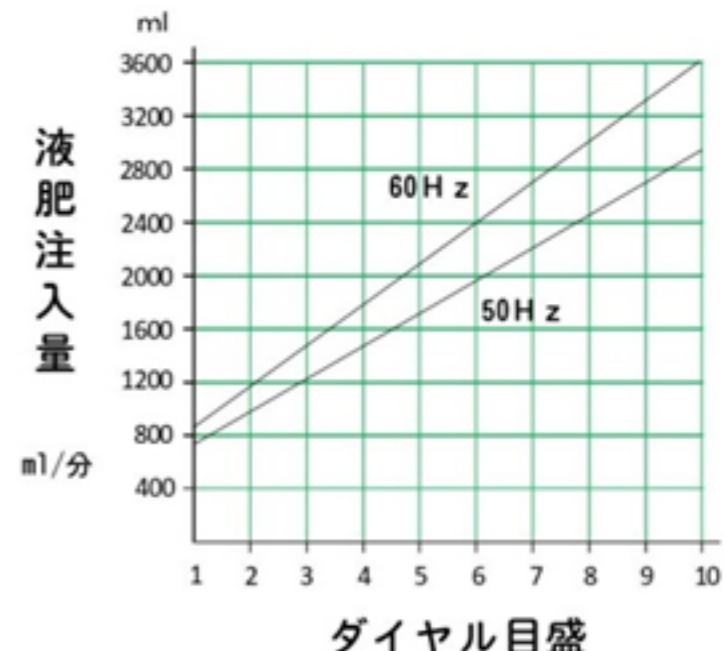

● 液肥注入量 c.c / 分 = 吐出量 L / 分 ×  $\frac{1}{\text{液肥希釈倍率}}$

● 施肥量 L = 液肥注入量 c.c / 分 × 時間